REDCAT ACCESS WITH ACTIVATE
DAILY OPERATION INSTRUCTIONS

PLEASE FOLLOW REDCAT ACCESS SET UP INSTRUCTIONS ON OPPOSITE PAGE.

ENSURE THE SYSTEM IS POWERED ON

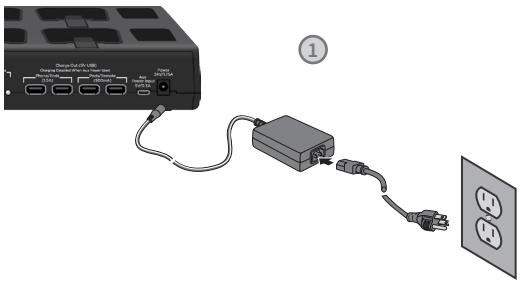

1. Locate the 24V power supply and power cable and connect the AC power cord into the DC power supply. Insert the DC connector into the DC Power jack on the back and plug the AC power cord into an electrical outlet.
2. Press the Activate Station power button to power on the Redcat. When powered on, the blue LED will glow.

USING THE FLEXMIKE

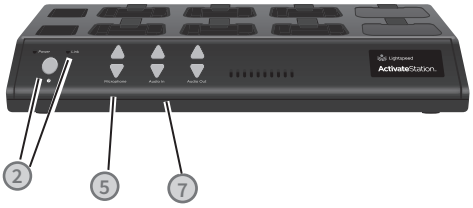

3. Remove microphone from charger and place the microphone around your neck. Ensure the top of the microphone is at the collarbone.
4. Press the power/mute button. The teacher status will turn blue, indicating the microphone is active.
5. Microphone volume may be adjusted at the microphone by using the Up/Down buttons on the side of the Flexmike. It may also be adjusted by using the Microphone volume buttons on the front of the Activate.

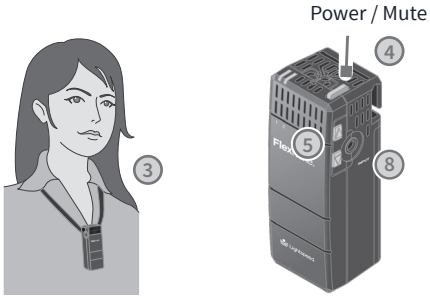

USE ACTIVATE STATION AS A WIRELESS AUDIO LINK

6. Plug your external audio equipment (for example, laptop), into one of the input jacks on the back of the Activate labeled “Aux Input” using a 3.5mm patch cable.
7. Adjust volume at the audio source. If necessary, further volume adjustment may be made using the Audio In volume button on the front of the Activate.
8. Additionally, you can connect your external audio equipment into the ‘Input’ jack on the side of the Flexmike.

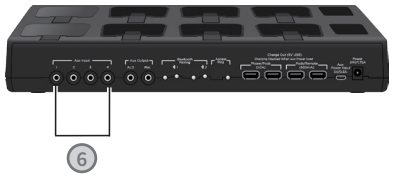

CHARGE FLEXMIKE NIGHTLY

9. Place the Flexmike into the charger. The power button light will glow red and the Mic status light will glow blue. When the Flexmike is fully charged, the power button light on the mic will change to green.

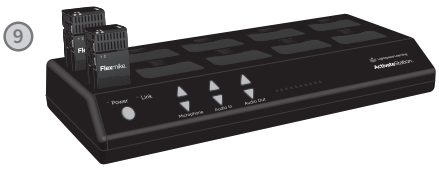

For further instructions on capturing audio and video using the Activate App, *and for complete operating instructions*, go to www.lightspeed-tek.com/RedcatAccess-usermanual (or scan the 2D barcode below).

Lightspeed Technologies
www.lightspeed-tek.com / 800.732.8999 / 503.684.5538

QS0472US01-5

AC-QSRCA-D

REDCAT ACCESS SET-UP AND DAILY OPERATION INSTRUCTIONS

DETERMINE SET-UP LOCATION AND PLUG IN POWER SUPPLY

1. The Redcat should be placed within 7 feet of an electrical outlet and on a surface about 6 to 7 feet off the ground.

   Next, find a location as far away as possible from the teacher who will be using the mic. Avoid putting the Redcat in close proximity to the teacher's mic which can result in feedback.

2. Locate the power supply and AC power cord. Connect the AC power cord into the DC power supply. Insert the DC connector into the DC Input on the Redcat and plug the other end into an electrical outlet.

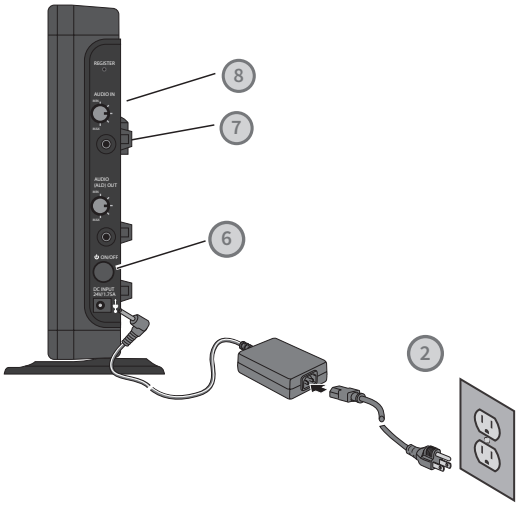

USING THE FLEXMIKE

3. Remove the microphone from the charger. The microphone will default to the Mute position, the teacher status will turn to red. Place the microphone around your neck. Ensure the top of the microphone is at the collarbone. If your Redcat has been powered down, removing the Flexmike from the charger will power the Redcat on.
4. Press the power/mute button. The teacher status will turn blue, indicating the microphone is active.
5. Microphone volume may be adjusted at the microphone by using the Up/Down buttons on the side of the Flexmike. It may also be adjusted by using the Microphone volume knob on the front of the optional Media Connector.
6. The Redcat may also be powered on by pressing the On/Off button on the side of the Redcat.

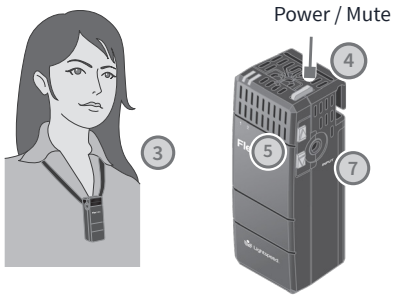

USE COMPONENTS AS A WIRELESS AUDIO LINK

7. Connect an audio source using a 3.5mm patch cable to the Input jack on the side of a second Flexmike or a Sharemike. You can also connect into the 'Audio In' jack on the side of the Redcat.
8. If the optional Media Connector is present, ensure it is powered on by plugging in the power cord to the USB power adapter and then plug the power adapter into an outlet. Plug your external audio equipment (for example, laptop), into one of the input jacks on the back of the Media Connector labeled "Audio In" using a 3.5mm patch cable.
9. Adjust volume at the audio source. If necessary, further volume adjustment may be made using the Audio In volume buttons on the side of the Redcat or on the front of the Media Connector.

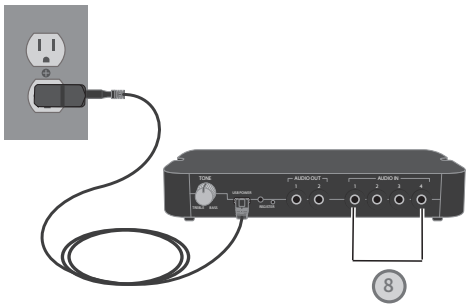

CHARGE FLEXMIKE NIGHTLY

10. Place the Flexmike into the cradle charger. The power button light will glow red and the Mic status light will glow blue. When Flexmike is fully charged, the power button light on the mic will change to green.

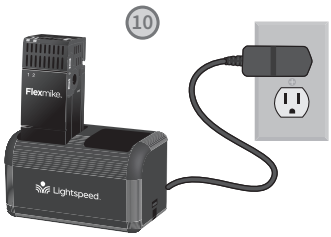

For complete operating instructions go to www.lightspeed-tek.com/RedcatAccess-usermanual (or scan the 2D barcode on the previous page).