


Topcat Cascadia Mounting Bracket | Retrofit Kit




Topcat Cascadia products that do not have tapped screw holes for the Topcat Mounting Bracket require this Retrofit Kit. The kit uses foam spacers to align Topcat Cascadia correctly and self-drilling screws to secure it in place.

KIT INCLUDES:


- 4 - Adhesive-backed foam blocks
- 1 - Small foam spacer: 115x18x25 mm
- 1 - Large foam spacer: 115x97x25 mm
- 4 - Self-drilling screws: #8 x 0.5"

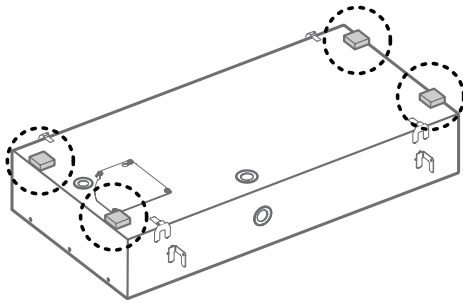


1. **Attach the four adhesive-backed foam blocks to the back of Topcat Cascadia as shown.**

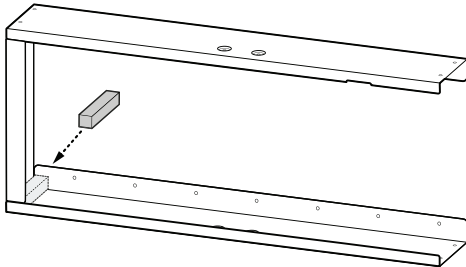


2. **After the top, bottom, and left brackets are connected, place the small foam spacer in the lower left corner.**

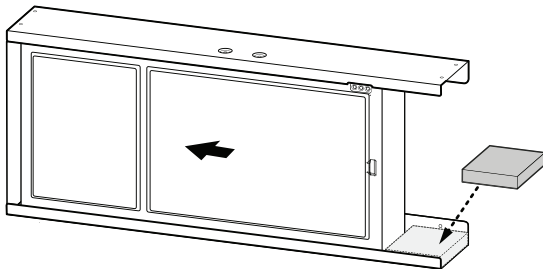

3. **Slide the Topcat Cascadia unit into the bracket until it reaches the small foam spacer. Insert the large foam spacer on the right side of Topcat Cascadia.**

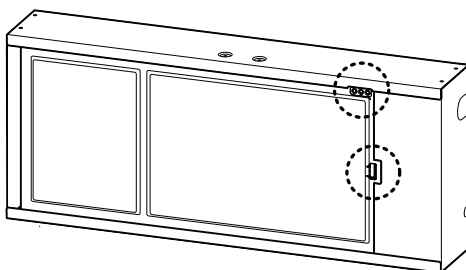

4. **Double check that the LED lights and latch line up with the bracket cutouts.**

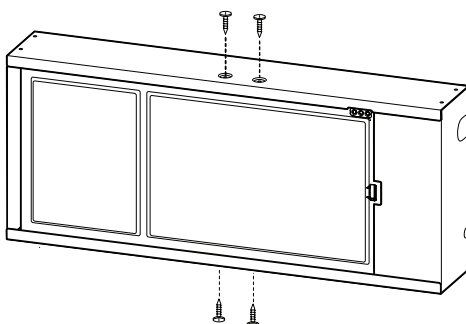

5. **Use the self-drilling screws to secure Topcat Cascadia to the mounting bracket. CAUTION: The self-drilling screws require some pressure to bite into the metal housing, but will install quickly when started.**

Follow the main mounting bracket instructions for securing necessary cables in the cavity on the right side of the mounting bracket.