

Pairing your Clearmike




Your system is shipped with microphones and base units pre-paired for quick and easy use.

If for any reason you need to pair new components, follow this pairing process:

PLEASE NOTE: All microphones must be out of the charger while pairing.

1

With the Clearmike powered off, point the IR transmitter lens toward the Redcat.

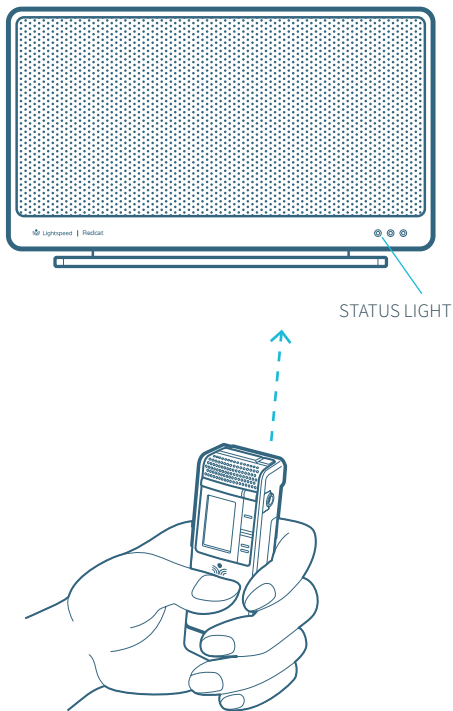


2

Press and hold the Power/Mute button for 5 seconds until the Talk/Mute light starts flashing blue and white. The Status light on the Redcat will also start flashing blue and white.

3

When complete, the Status light on the Redcat will turn blue, the Talk/Mute light on the microphone will be white, and the display on the microphone will say "Pair Success".

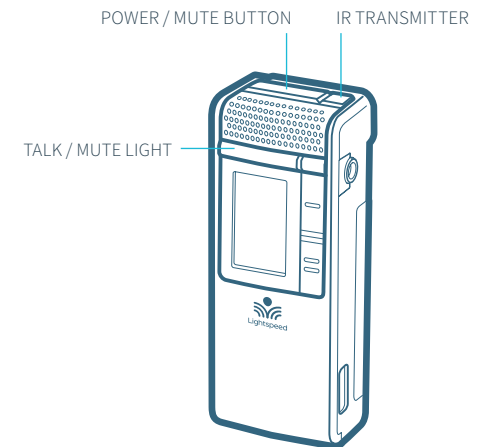

Pairing Redcat to Media Connector





Your system is shipped with microphones and base units pre-paired for quick and easy use. If, for any reason, you need to pair new components, follow this pairing process:

PLEASE NOTE: Microphones should be out of the charger while pairing.

1

With the microphone turned on, point the IR transmitter lens toward Redcat (for ShareMike, the transmitter lens is located on the back of the microphone).

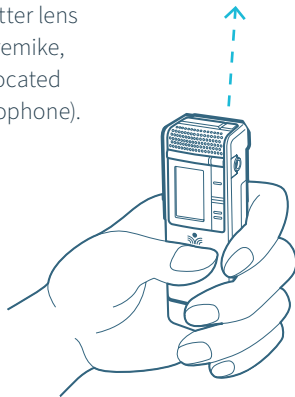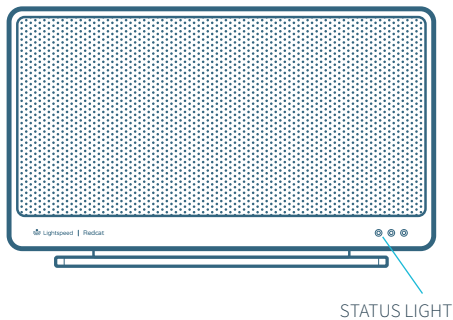

2

Press and hold the ClearMike power button for 5 seconds until the status light on Redcat starts flashing, then release the button. At this point, the status light on Redcat will blink for 30 seconds.

If after 30 seconds the status light blinks rapidly, you will need to start the pairing process again.

3

On the Media Connector, press and hold the Tone Selector button for 5 seconds to put it into pairing mode.


When the status lights are solid on both Redcat and Media Connector, pairing is successful.

POWER IR TRANSMITTER



CLEARMIKE

MEDIA CONNECTOR



STATUS LIGHT

TONE SELECTOR BUTTON